


# duraflo® INSTALLATION GUIDE

## Multiple 3 in 1 Pipe Flashing Installation Instructions

### PermOseal® Multiple 3 in 1 Size FLASHING

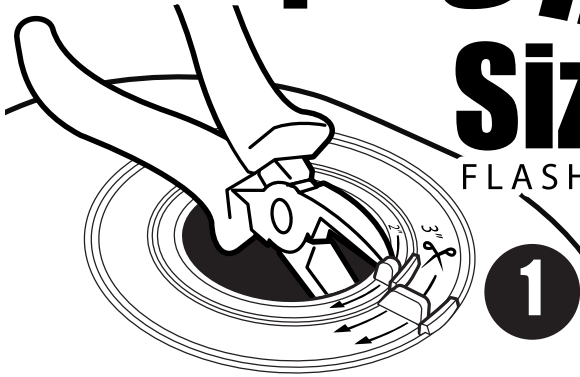


1

**IMPORTANT:** Clip starter groove beside tab as indicated - do not cut beyond blade stop.

Avoid Cutting flange or riser during installation

Then peel away in direction of arrows on ring

2

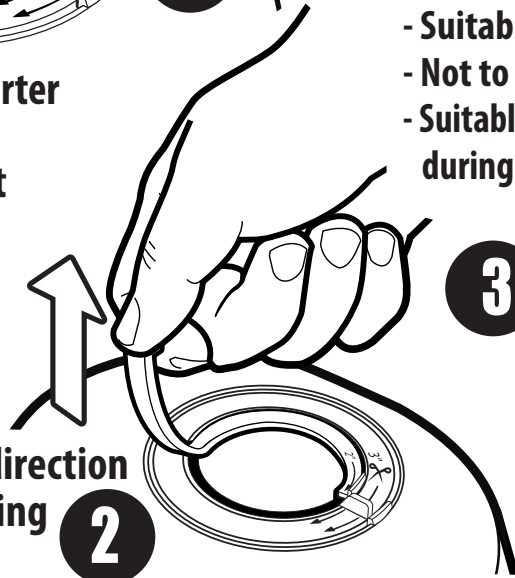

- If replacing an existing flashing remove old part before installing the PermOseal® 3in1.
  - Determine size of vent pipe.
  - PermOseal® 3in1 can be used for 1.5" pipe as is. For 2" or 3" pipe use clippers or blade to cut and peel away inner rings as needed.
  - Push the PermOseal® 3in1 over the vent pipe and secure the flange to roof deck with roofing nails.
  - For replacement applications slide the top part of the flange under the shingles.
- Suitable for 2/12 – 12/12 roof pitches.  
- Not to be used with petroleum based sealants.  
- Suitable for cold weather applications, use caution during installation in extreme conditions.

3 Assemble, secure and seal

Canplas Industries Ltd.  
500 Veterans Drive, P.O Box 1800  
Barrie, Ontario, Canada L4M 4V3  
Tel. (705) 726-3361  
Toll Free 1-800-461-5300  
Fax: (705) 726-2186

[www.duraflo.com](http://www.duraflo.com)

**canplas®**