


# **duraflo**<sup>®</sup> **RidgeRoll** 20 ft. Rolled Vent

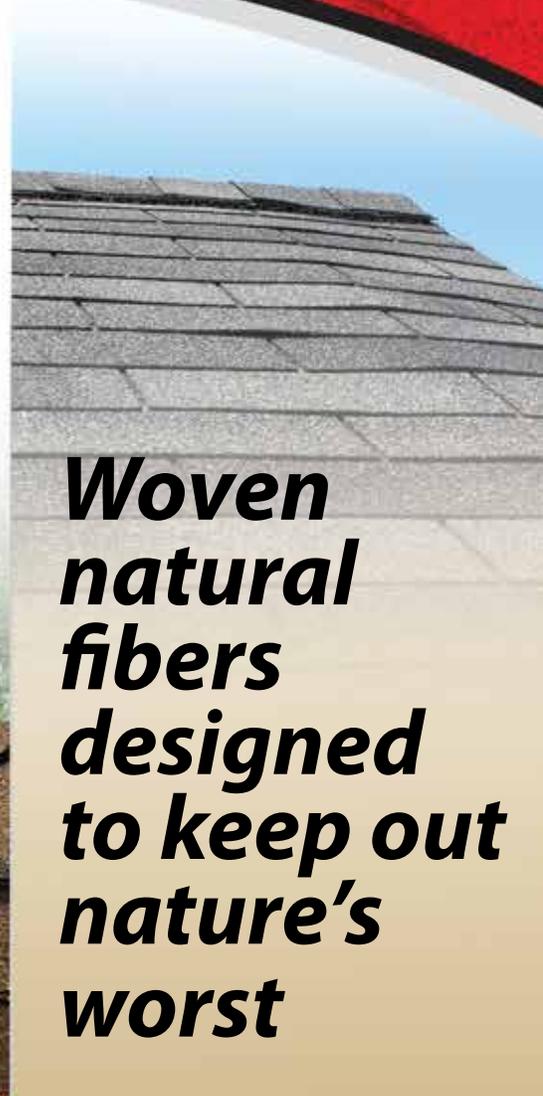


**Woven  
natural  
fibers  
designed  
to keep out  
nature's  
worst**

Engineered  
for ease of  
installation

Available in  
several widths  
11.5"  
10.5"  
and 8"

20 ft. Length

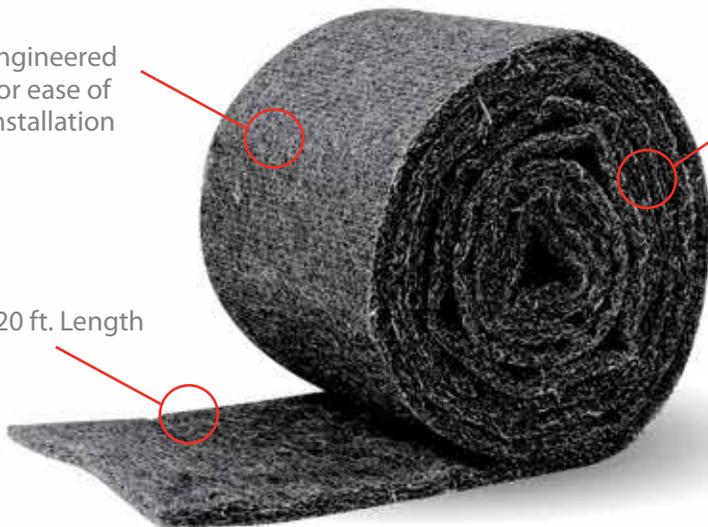

- Coil and bag of nails included
- Easy installation
- Metric and U.S. widths
- Low profile design
- 20 ft. rolls
- 15 sq. in. per linear ft.



**TDI**  
Texas Department of Insurance


CATEGORY 2  
HURRICANE RATED

[www.duraflo.com](http://www.duraflo.com)  
1-800-461-5300

**canplas**<sup>™</sup>

# duraflo® RidgeRoll

20 ft. Rolled Vent

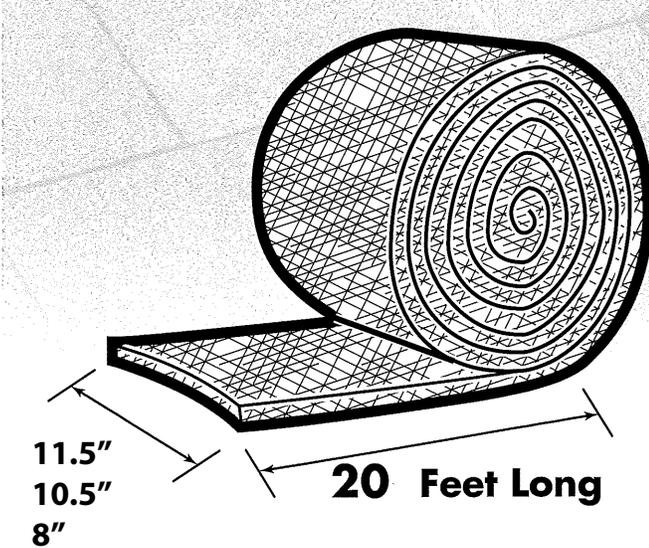


11.5"  
10.5"  
8"  
20 Feet Long

**PART NO:** 60RVA20MET, 60RVA20US, 60RVA208  
**Widths:** 11.5", 10.5", 8"  
**LENGTH:** 20 Feet  
**HEIGHT:** 0.887"  
**NET FREE AREA:** 15 Sq. in. per linear foot  
**CODES AND STANDARDS:**




**COLOURS :** BLACK  
**WARRANTY :** 6 Months (See rep for details)

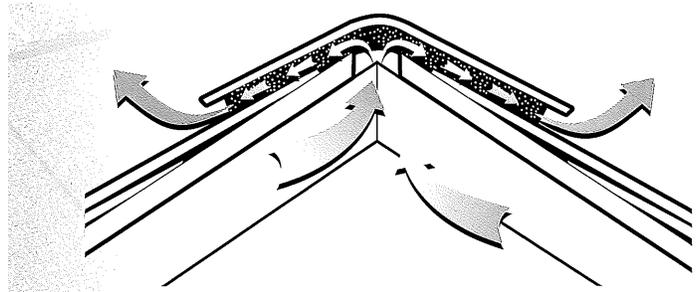


## SPECIFICATION SHEET


### INSTALLATION INSTRUCTIONS:

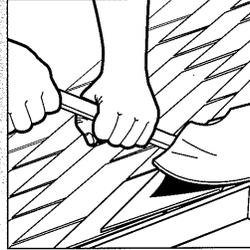


**STEP 1:** Remove ridge cap shingles along entire length of ridge.

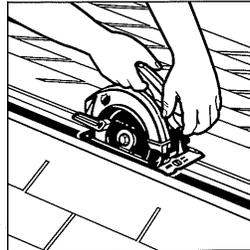

**STEP 2:** Cut opening 3/4" on each side of peak (for ridge board cut 1 3/4" on each side of ridge). Leave overhang uncut at each end of ridge. Do not cut roof truss or ridge board.

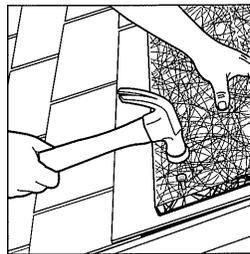

**STEP 3:** Tack one end and unroll entire length of roll to ensure straightness. Multiple pieces simply butt together and tack down. No end plugs are required.

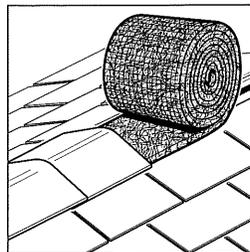

**STEP 4:** Install ridge cap shingles over top of vent using nails provided inside box. To ensure uniform look do not over drive nails. Ensure equal soffit ventilation.

**Canplas Industries Ltd.**  
 500 Veterans Dr., P.O. Box 1800  
 Barrie, Ontario  
 Canada L4M 4V3  
 Tel: (705) 726-3361  
 Fax: (705) 726-2186  
 Toll Free: 1-800-461-5300

**duraflo®**  
WE KNOW VENTILATION

E-mail: [duraflo@canplas.com](mailto:duraflo@canplas.com)  
[www.duraflo.com](http://www.duraflo.com)

**canplas®**