


# **duraflo**® INSTALLATION GUIDE

## **PermOseal® Thermoplastic Base Flashing Installation Instructions**

1. If replacing an existing flashing remove old part before installing the PermOseal® Thermoplastic Base flashing
2. Determine size of vent pipe and select either a 1.5", 2", 3" or 4" Thermoplastic flashing.
3. Simply push the flashing opening over the vent pipe and secure the flange to the roof deck with roofing nails.
4. For replacement applications slide the top part of the flange under the shingles.
5. No pull or tear-out sizing adjustments to the product are required.
  - Suitable for 2/12 – 12/12 roof pitches.
  - Not to be used with petroleum based sealants.
  - Suitable for cold weather applications, use caution during installation in extreme conditions.

**PermOseal**®  
**THERMOPLASTIC**  
BASE FLASHING

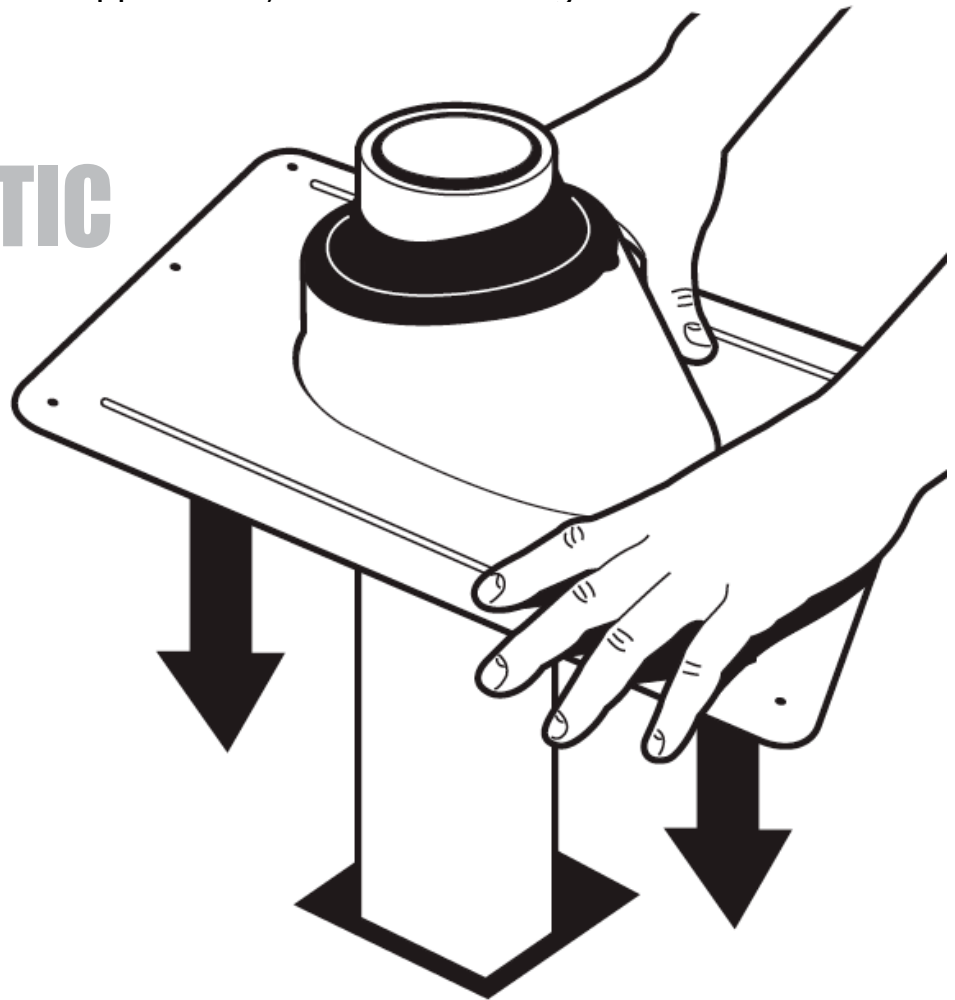

Canplas Industries Ltd.  
PO Box 1800, 500 Veterans Drive  
Barrie, Ontario, Canada L4M 4V3  
Tel. (705) 726-3361  
Toll Free 1-800-461-5300  
Fax: (705) 726-2186

[www.duraflo.com](http://www.duraflo.com)

**canplas**®